


DM412 & BMC36.15A CONNECTIONS FOR PROPER MOTOR ROTATION

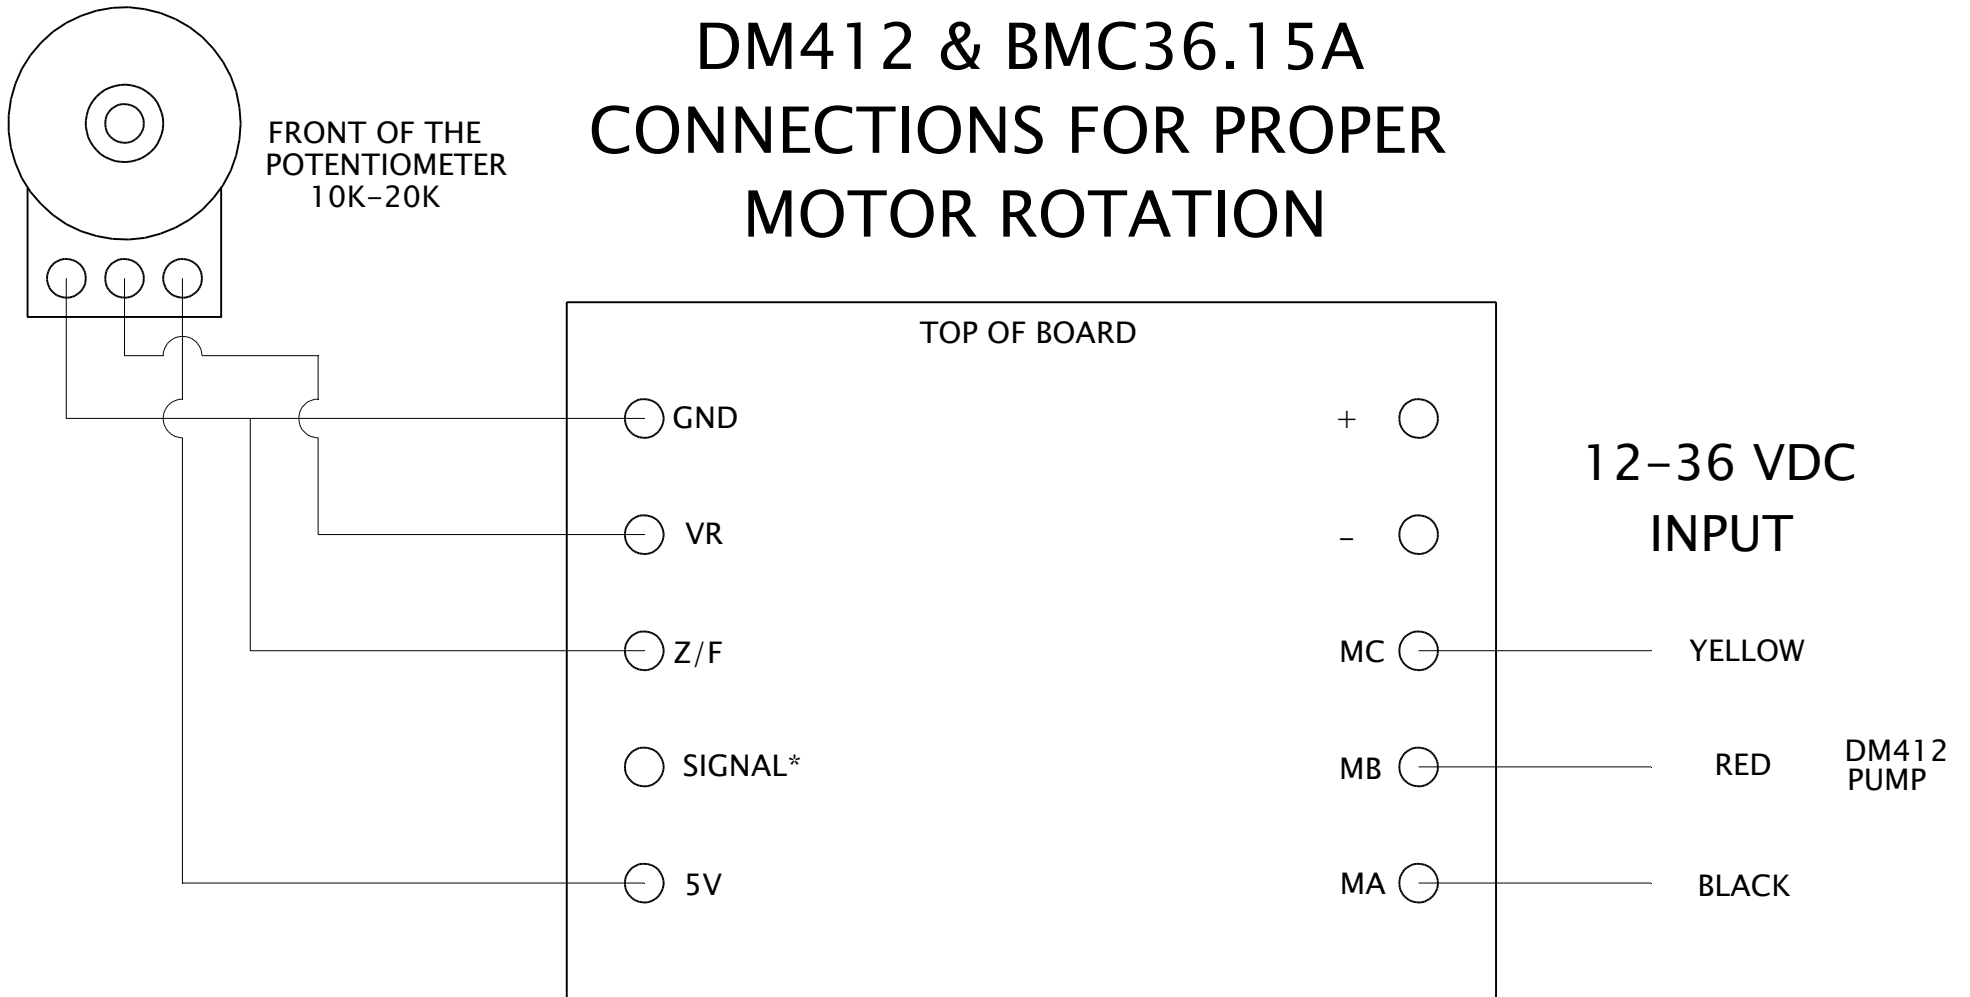

DO NOT OPERATE CONTROLLER WITHOUT TERMINAL ZF CONNECTED TO GND TERMINAL.

SIGNAL TERMINAL PROVIDES SPEED OUTPUT SIGNAL. (OPTIONAL)

REVISION: 1

7/27/2017

