
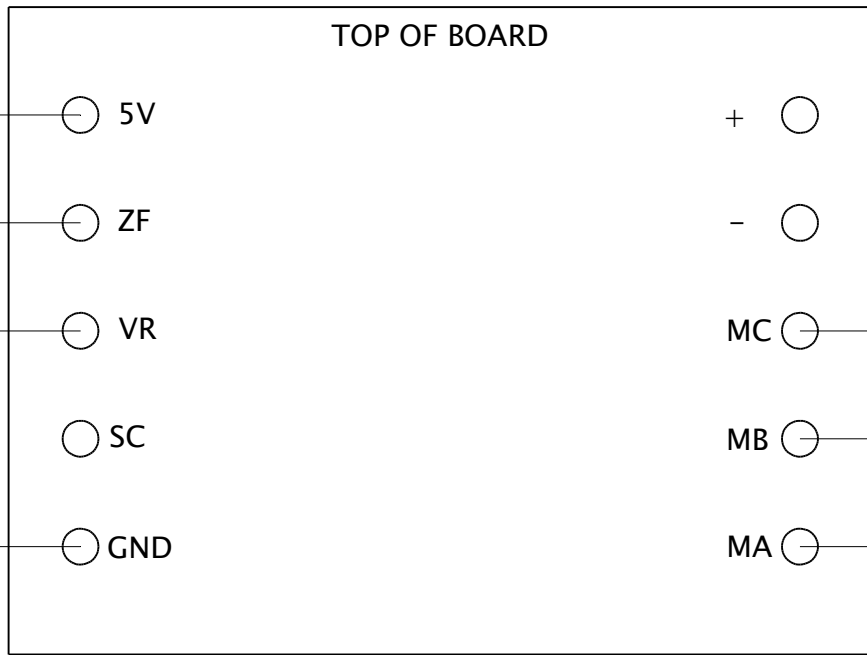


HP500S12 & BMC12.3A CONNECTIONS FOR PROPER MOTOR ROTATION

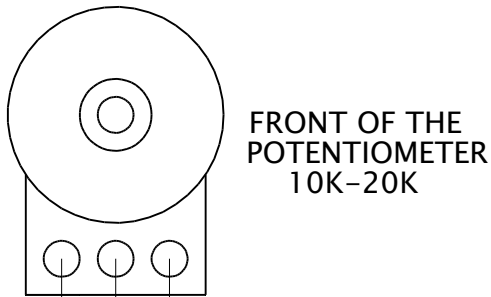

8-18 VDC
INPUT

- MC — BLACK
 - MB — BROWN
 - MA — RED
- HP500S12
PUMP

DO NOT OPERATE CONTROLLER WITHOUT TERMINAL ZF CONNECTED TO GND TERMINAL.

TO CONTROL SPEED USING AN EXTERNAL ANALOG OR PWM SIGNAL, USE TERMINAL VR AND GND IN LIEU OF POTENTIOMETER.

SC TERMINAL PROVIDES SPEED OUTPUT SIGNAL (OPTIONAL)

REVISION: 1

7/27/2017

